




**N**

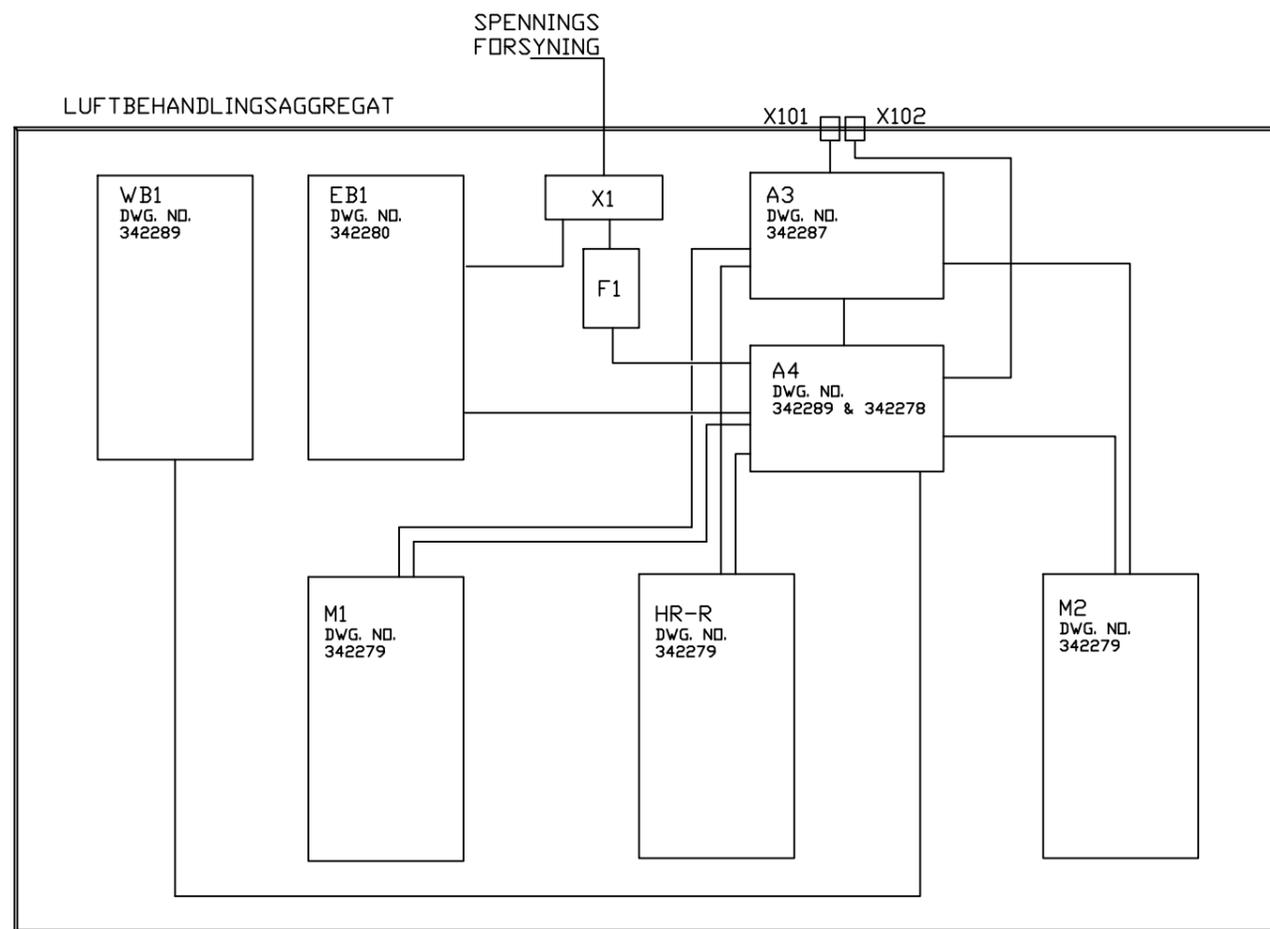

A3

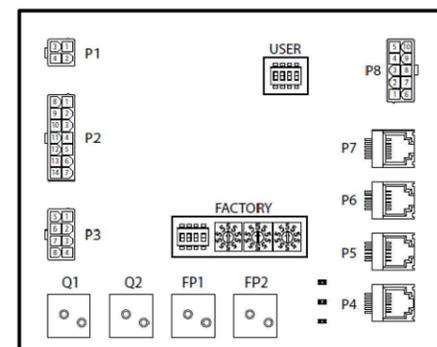



A4

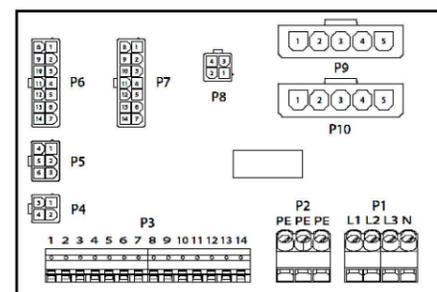

2	Monochrome PDF	160916/MAJ	Date/Sign.

No. Unit	Pos. No.	Name, type, dim.	Drawing no. Standard	Art. No.	Matr. Spec.
Date	2014-09-23	Drawn <i>TOE</i>	Projection 	Scale	
Checked		Appr.			
<b>CONNECTION DIAGRAM</b> <b>S50 &amp; L50 400V</b> <b>Art.nr. 114050</b>					
				342286	

Lay-out Moun'tain

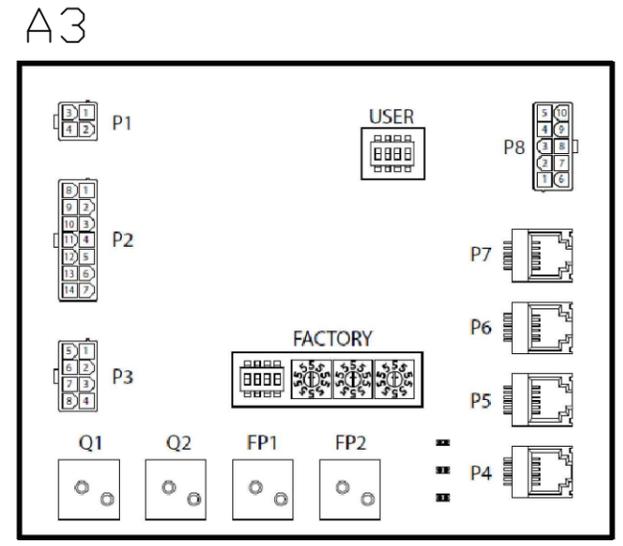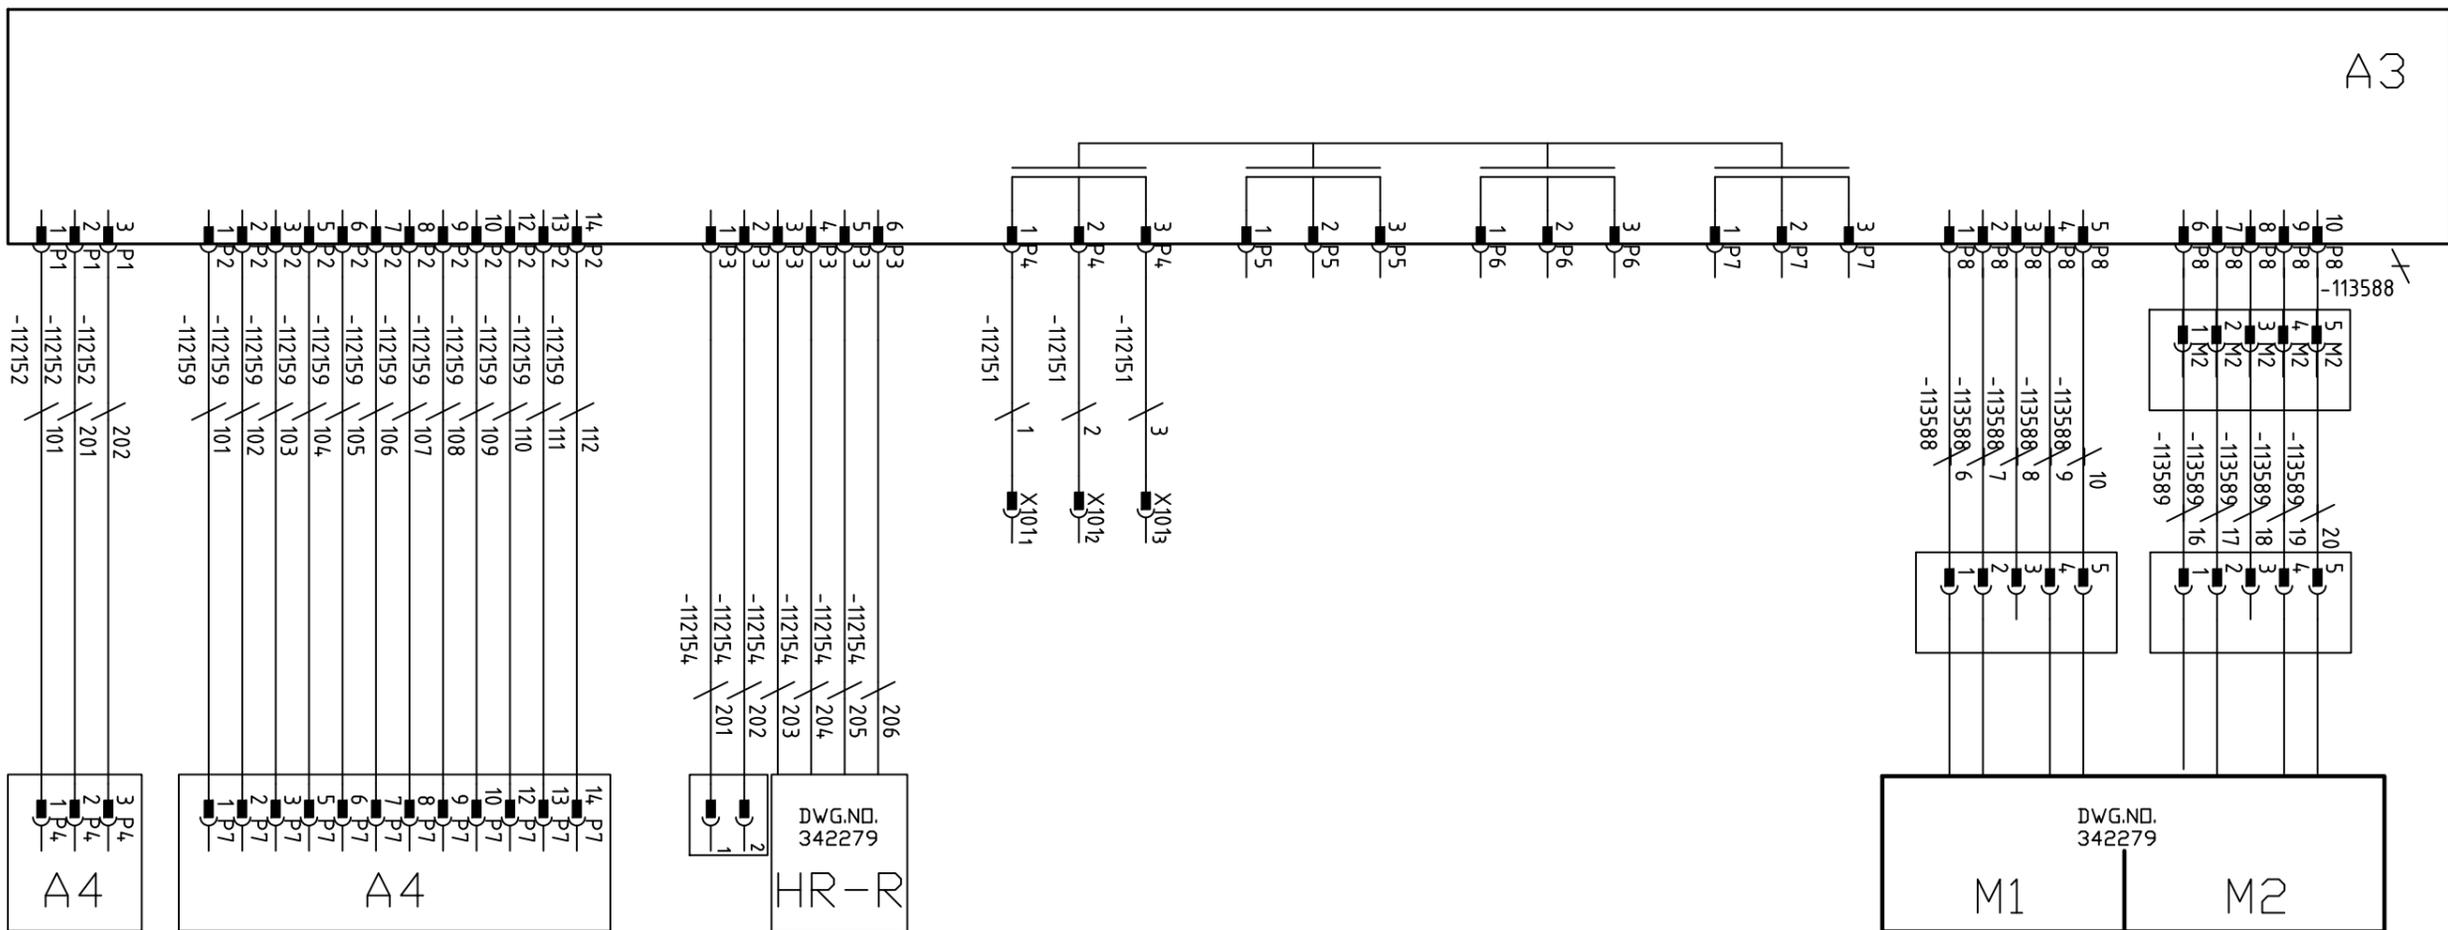

"USER" Dip switch

DIP Switch	ON	OFF	Remark
1	VARMEBATTERI	IKKE VARMEBATTERI	ON = MED VARMEBATTERI OFF = IKKE NOE VARMEBATTERI
2	ELEKTRISK	VANN	TYPE VARMEBATTERI.
3	JA	NEI	M1 MOTORVERN LASKET.
4	JA	NEI	M2 MOTORVERN LASKET.


= Fabrikkinnstilling

160916/MAJ	Date/Sign.
2	Changes
Monochrome PDF	Symb.


No. Unit	Pos. No.	Name, type, dim.	Drawing no. Standard	Art. No.	Matr. Spec.
Date	2014-09-23	Drawn TOE	Projection 	Scale	
Checked		Appr.			
MODBUS I/O-EXTENDER A3 S50 & L50				Replaces:	Replaced by: 342287

Lay-out Mountain

A4

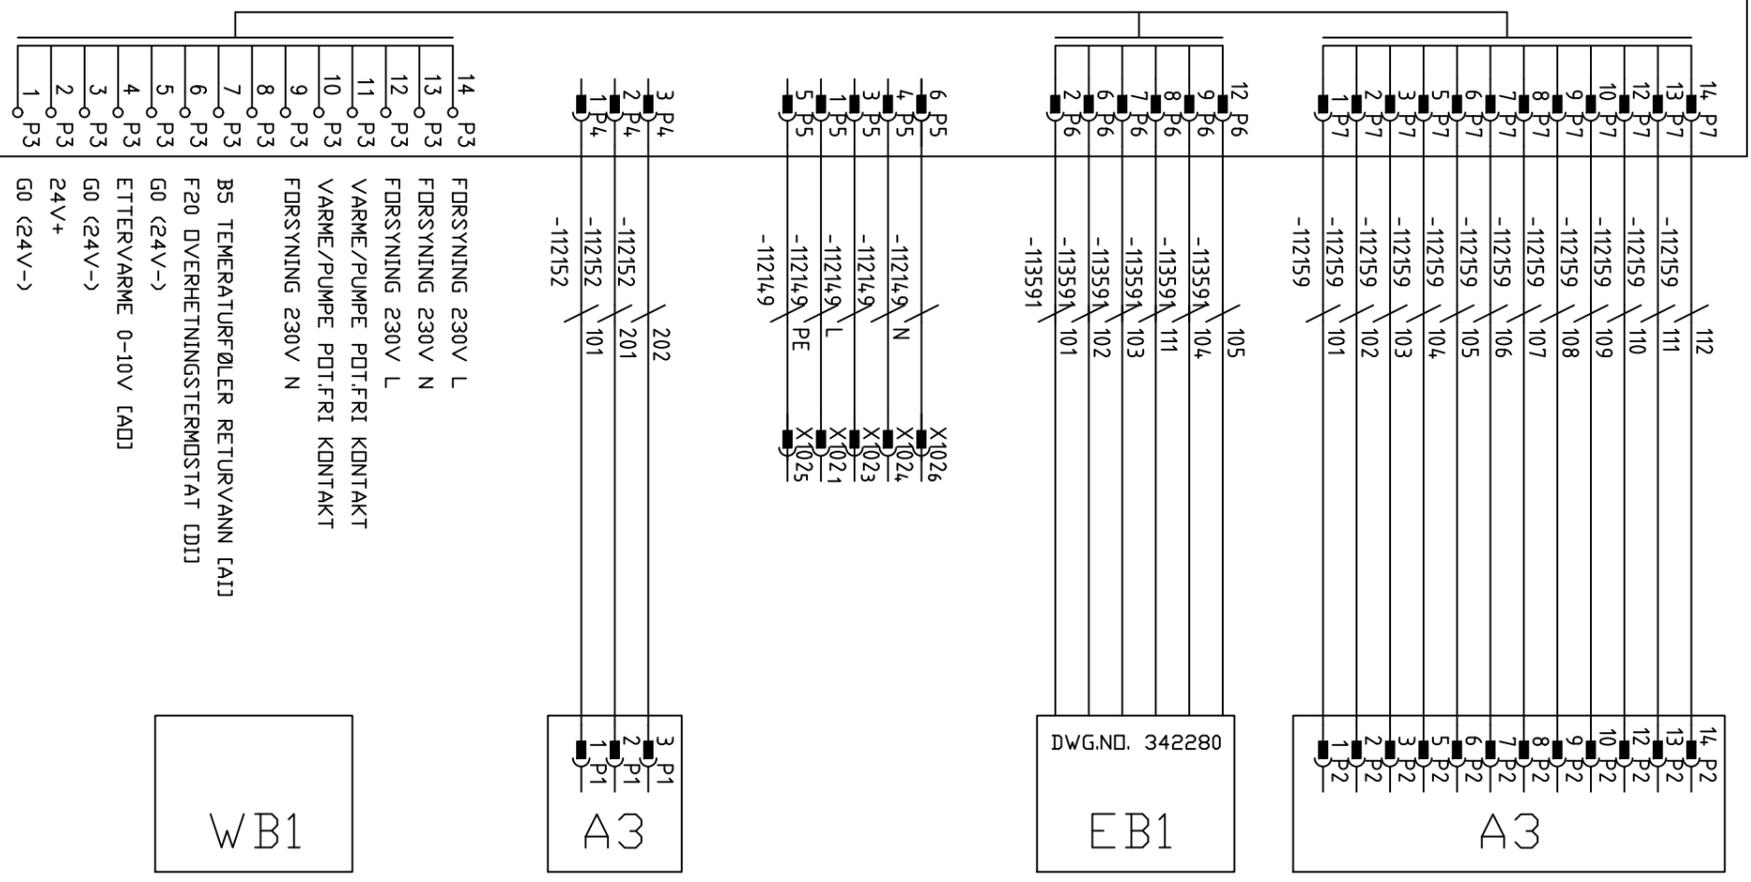


WB1

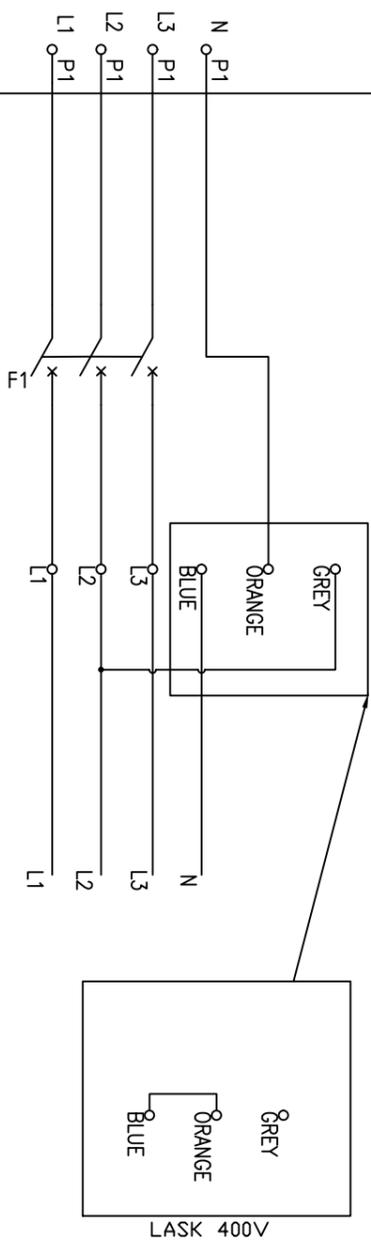

LASK 400V


A4

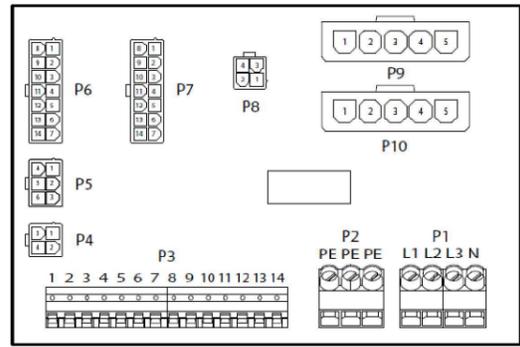

2	Monochrome PDF	Changes	Date/Sign.
			160919/MAJ

No. Unit	Pos. No.	Name, type, dim.	Drawing no. Standard	Art. No.	Matr. Spec.
Date	2014-09-23	Drawn TOE	Projection		Replaces: Replaced by: 342289
Checked		Appr.	Scale		
POWER DISTRIBUTION BOARD					
A4					
S50 & L50 400V					




Lay-out Mountain

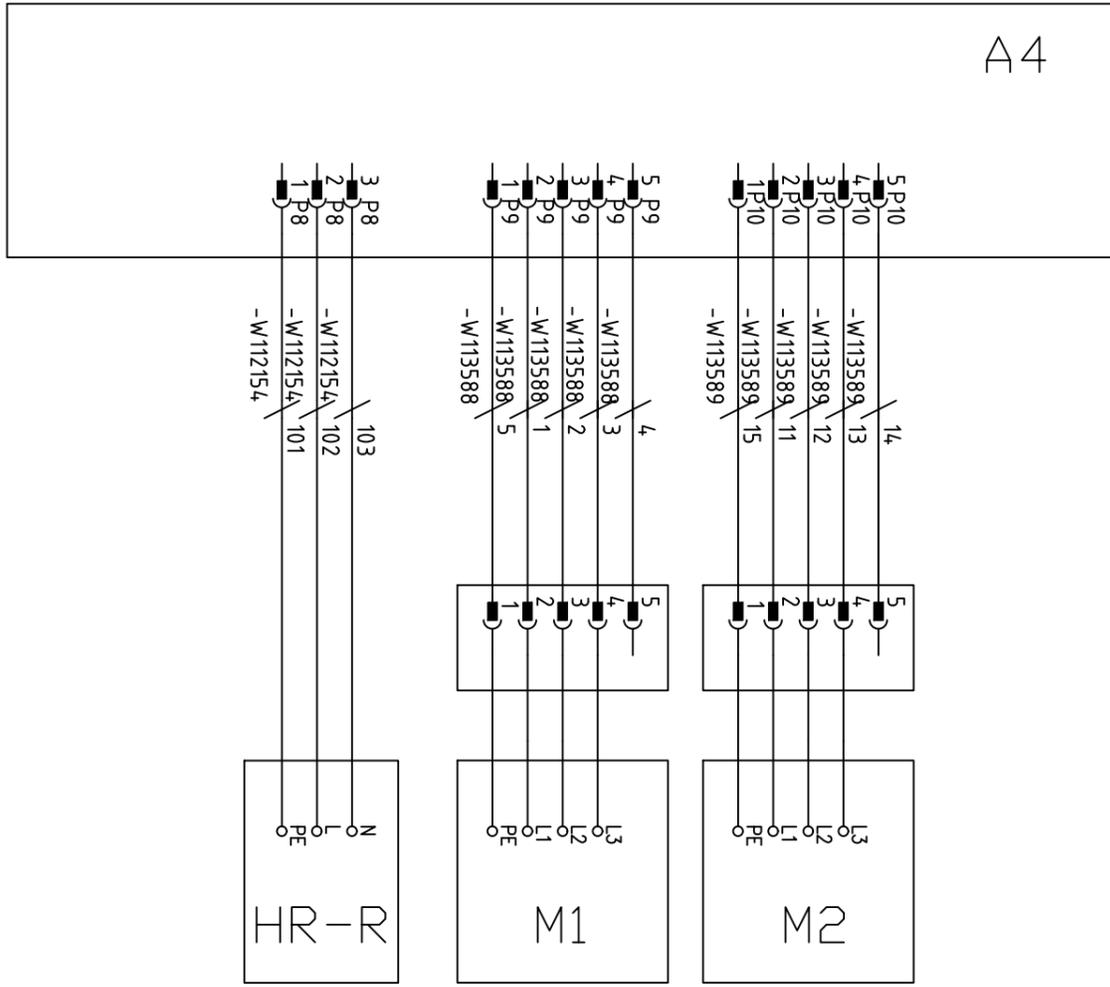



1	Manochrome_PDF	160915/MAJ	Date/Sign.
Changes			

No. Unit	Pos. No.	Name, type, dim.	Drawing no. Standard	Art. No.	Matr. Spec.
Date	2014-02-10	Drawn <i>TOE</i>	Projection 	Scale	<b>FLEXIT®</b>
Checked		Appr.			
<i>POWER DISTRIBUTION BOARD</i>				Replaces:	Replaced by:
A4				342278	
S50 & L50					

Lay-out Moun'tain

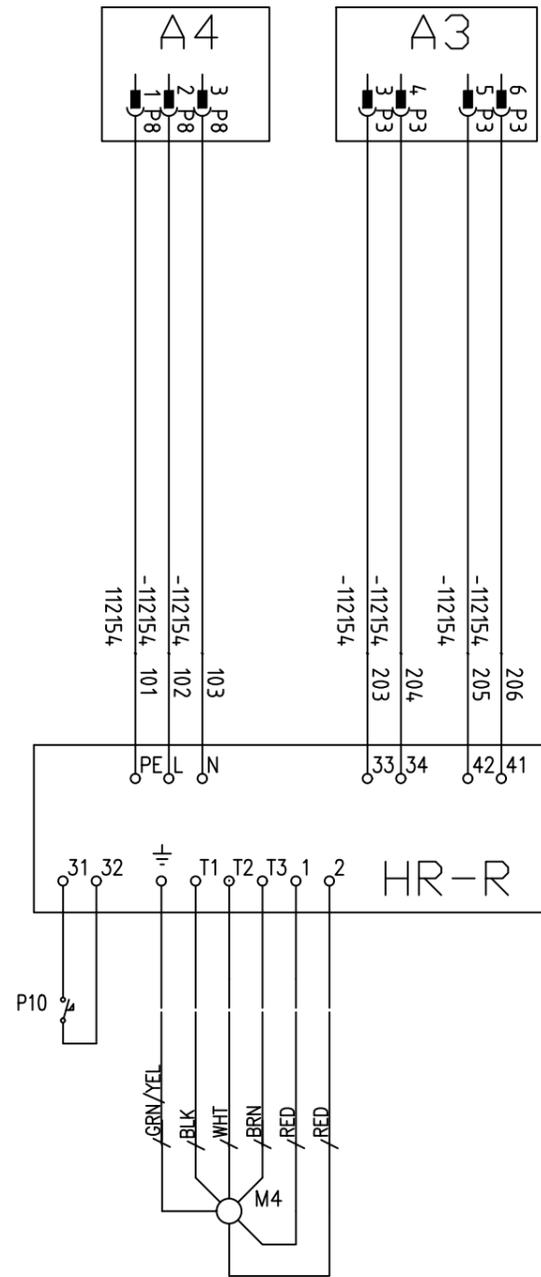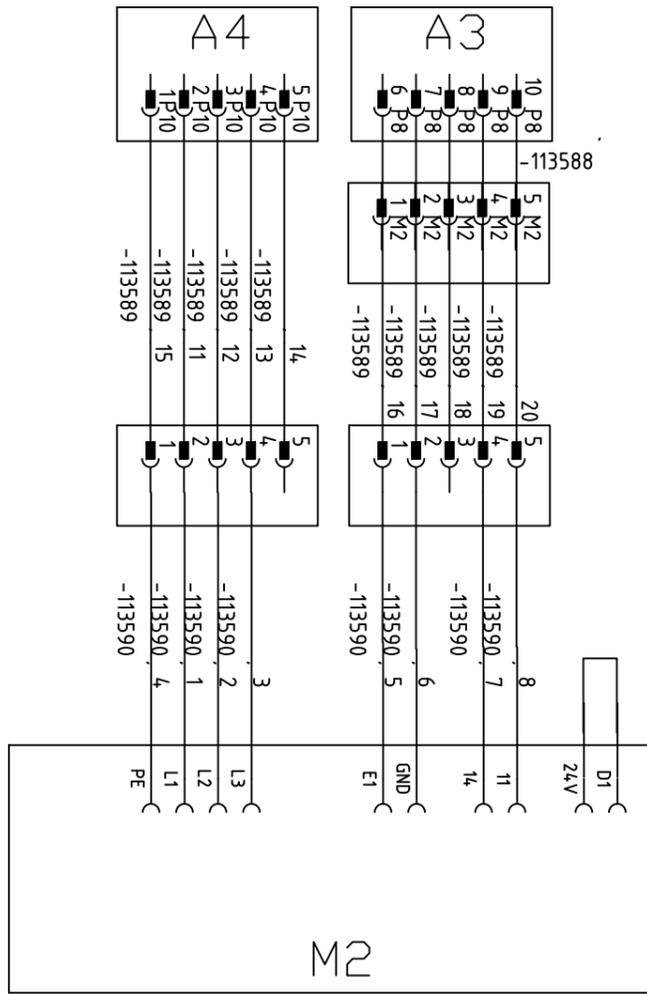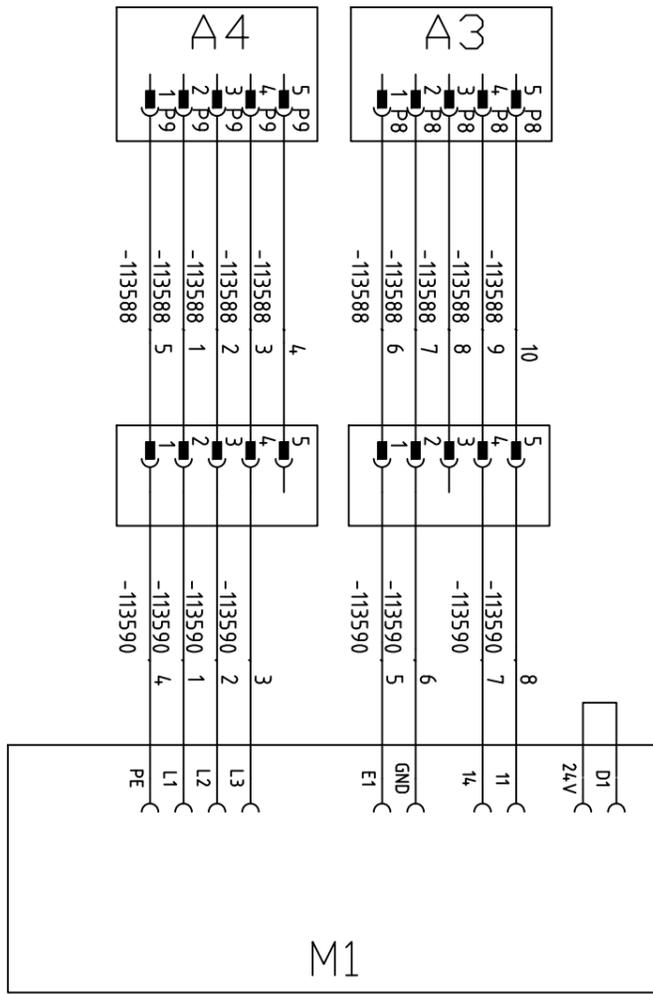



DESCRIPTION	230V	400V
M1	1950W	2300W
M2	1950W	2300W
HR-R	40W	40W

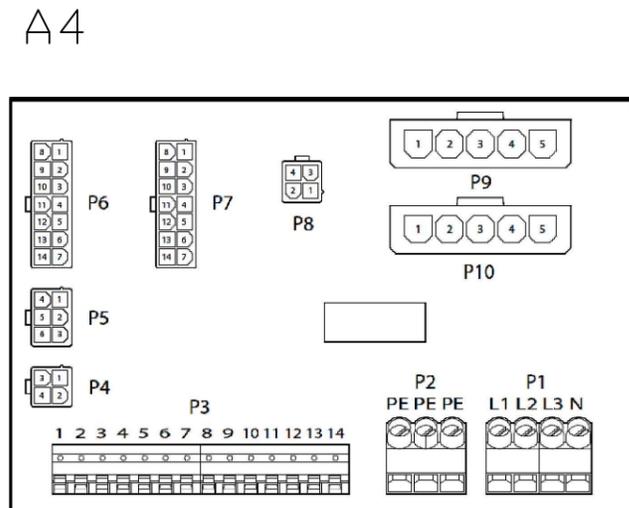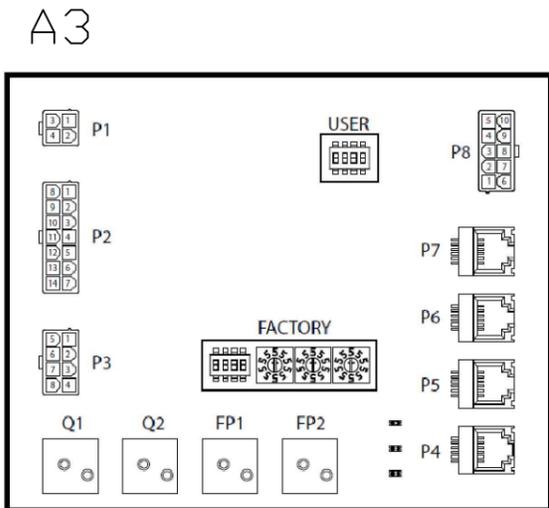

160915/MAJ  
Date/Sign.  
1 Monochrome PDF  
Symb.


No. Unit	Pos. No.	Name, type, dim.	Drawing no. Standard	Art. No.	Matr. Spec.
Date	2014-02-10	Drawn TOE	Projection		
Checked		Appr.	Scale		
<p>FANS + ROTOR M1, M2 AND HR-R S50 &amp; L50</p>				Replaces:	Replaced by:
				342279	

Lay-out Mountain

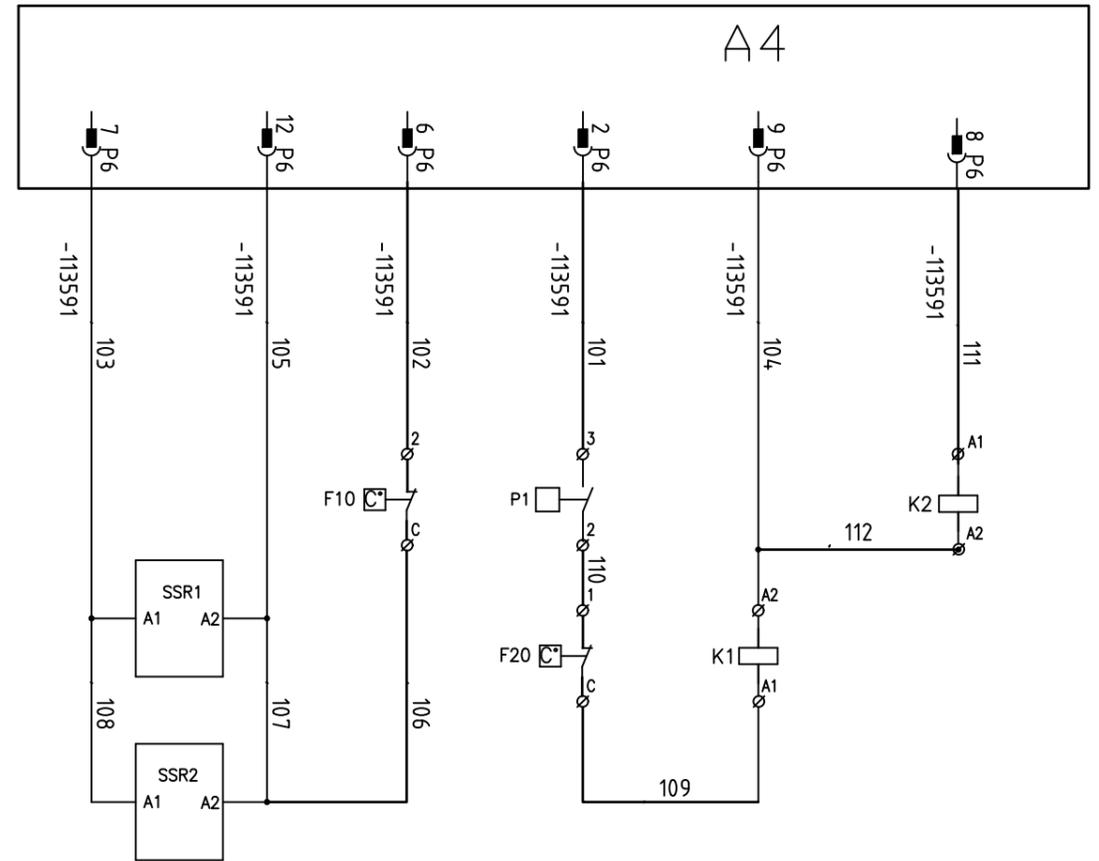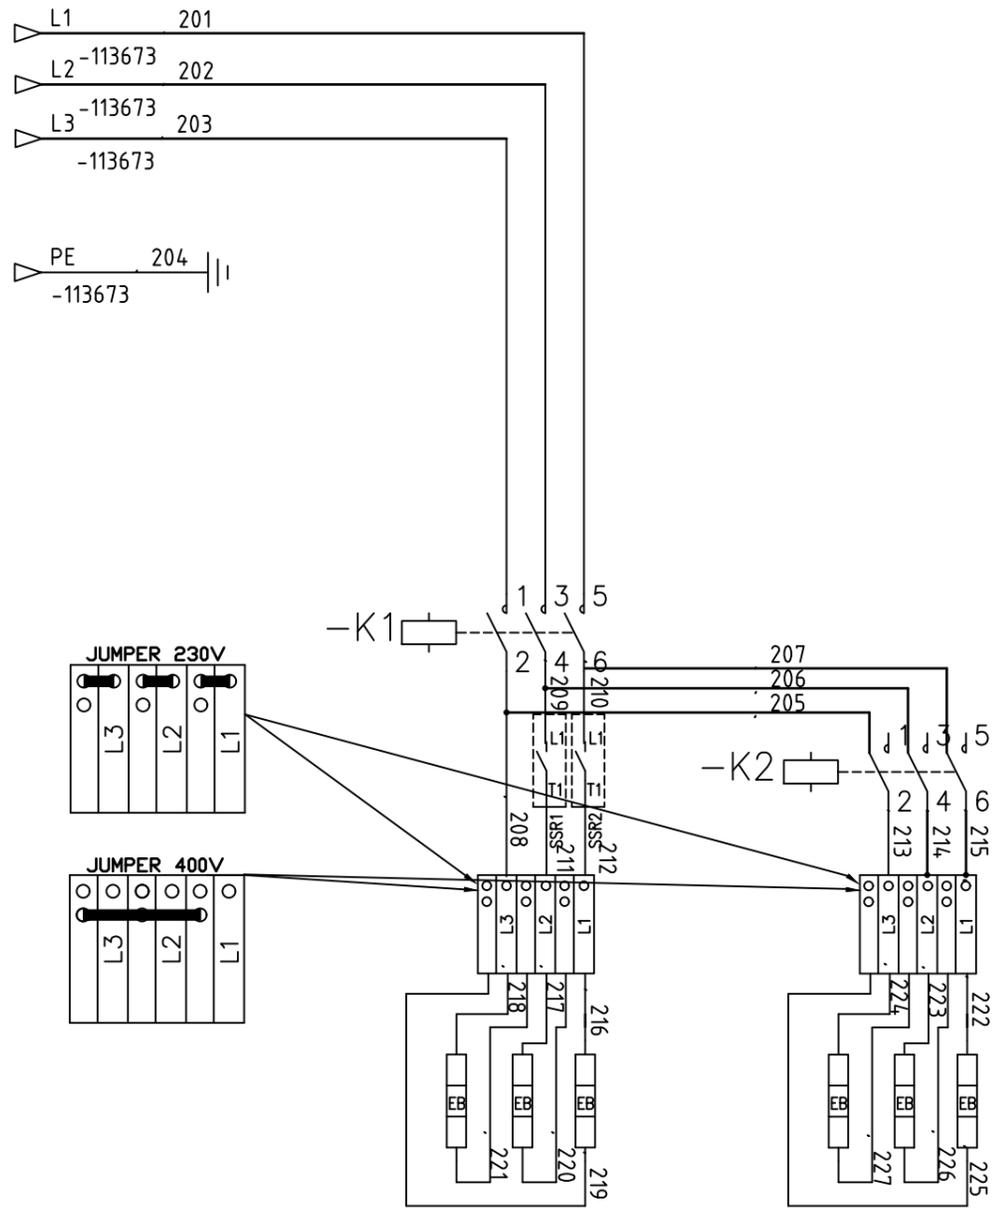

DESCRIPTION	
EB	2333W

A4

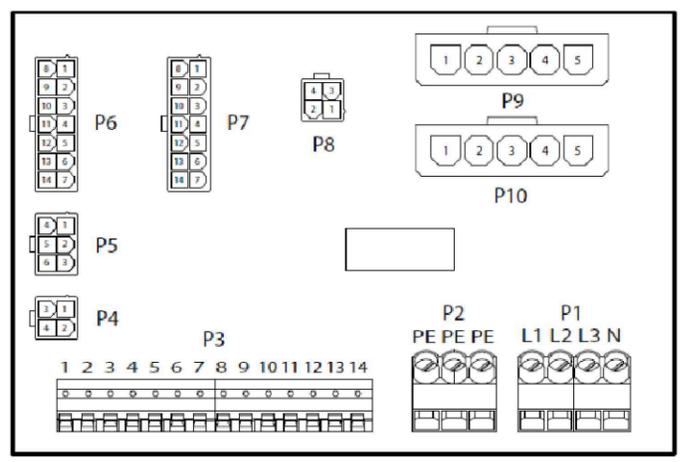

1	Monochrome PDF	Changes	160915/MAJ	Date/Sign.
---	----------------	---------	------------	------------

No. Unit	Pos. No.	Name, type, dim.	Drawing no. Standard	Art. No.	Matr. Spec.
Date	2014-02-10	Drawn TOE	Projection		
Checked		Appr.			
<i>ELECTRIC HEATER</i>				Replaces:	Replaced by:
<i>EB1</i>				<b>FLEXIT</b>	
<i>S50 &amp; L50</i>					
				342280	

DESCRIPTION	N	E	S	DK	SF
A1	Regulator	Regulator	Regulator	Styresystem	Ohjausjärjestelmä
A2	Koblingskort	Connection board	Anslutningskort	Klemmekort	Riviliitinkortti
A3	Modbusextender	Modbus extender	Modbusextender	Modbusextender	Modbus-laajennin
A4	Strømforsyningskort	Power supply board	Strömförsörjningskort	Strømforsyningskort	Virransyöttökortti
A5	Styresignaler til rotor	Rotor controller	Rotorstyrning	Styresignaler til rotor	Rootorin ja lämpötila
B1	Temperaturføler, tilluft	Temperature sensor, supply air	Temperaturgivare, tilluft	Temperaturføler, indsugningsluft	Tuloilma-anturi
B3	Temperaturføler, avtrekk	Temperature sensor, extract air	Temperaturgivare, frånluft	Temperaturføler, udsugning	Lämpötila-anturi, poistoilma
B4	Temperaturføler, uteluft	Temperature sensor, outdoor air	Temperaturgivare, uteluft	Temperaturføler, udeluft	Lämpötila-anturi, ulkoilma
B5	Returvannsføler vannbatteri	Returnwater sensor, water battery	Returvattengivare, vattenbatteri	Temperaturføler, vandvarmevlade	Lämpötila-anturi, vesipatteri
DA1	Avkastspjeld	Exhaust air damper	Avluftsspjäll	Spjæld, udsugningsluft	Sulkupelti, poistoilma
DA2	Uteluftspjeld	Outside air damper	Uteluftsspjäll	Spjæld, udeluft	Sulkupelti, ulkoilma
EB1	Eftervarmebatteri, elektrisk	Heating battery, electrical	Eftervarmebatteri, elektrisk	Eftervarmevlade, elektrisk	Lämmityspatteri, sähkö
F1	Sikring	Fuse	Säkring	Sikring	Sulake
F10	Overopphetningstermostat EB1 Manuell reset	Thermostat overheating EB1 Manual reset	Överhettningstermostat EB1 Manuell återställning	Overophedningstermostat EB1 Manuel resetfunktion	Yliämpötermostaatti EB1 Manuaalinen nollaus
F20	Overhetningstermostat EB1 Automatisk reset	Thermostat overheating EB1 Automatic reset	Överhettningstermostat EB1 Automatisk återställning	Overophedningstermostat EB1 Automatisk reset	Termostaatti EB1 Automattinen nollaus
M1	Tilluftsvifte	Supply air fan	Tilluftsflykt	Indsugningsventilator	Tuloilmapuhallin
M2	Avtrekksvifte	Extract air fan	Frånluftsflykt	Udsugningsventilator	Poistoilmapuhallin
M4	Rotormotor	Rotor motor	Rotormotor	Rotormotor	It-kiekon mootori
P1	Trykkvakt, EB1	Pressure Guard, EB1	Tryckvakt, EB1	Pressostat, EB1	Paine-eroanturi, EB1
P10	Rotorvakt	Rotation detector	Rotationsvakt	Rotations detektor	Pyöritys ilmaisim
S1	Styrepanel	Control panel	Styrpanel	Styrepanel	Ohjauspaneeli
T1	Transformator	Transformer	Transformator	Transformator	Muuntaja
WB1	Eftervarmebatteri, vann	Heating battery, water based	Eftervarmebatteri, vatten	Eftervarmevlade, vand	Lämmityspatteri, vesi
X1	Rekkelemme, forsyning	Connector, supply voltage	Anslutningsplint, matning	Rækkelemmer indgående forsyning	Riviliittimet – sisääntulevaa syöttöä varten
X100	ISDN skjøtekontakt	RJ45 contact	RJ45 skarvkontakt	RJ45-samlemuffe	RJ45-liitäntä
X101	RJ12 skjøtekontakt	RJ12 contact	RJ12 skarvkontakt	RJ12-samlemuffe	RJ12-liitäntä
X102	Skjøtekontakt	Contact	Skarvkontakt	Samlemuffe	Liitäntä
E1, E2	EMC-filter	EMC filter	EMC-filter	EMC-filter	EMC-suodatin